


HV2000W System Connection Diagram

Hand Control

HV2001

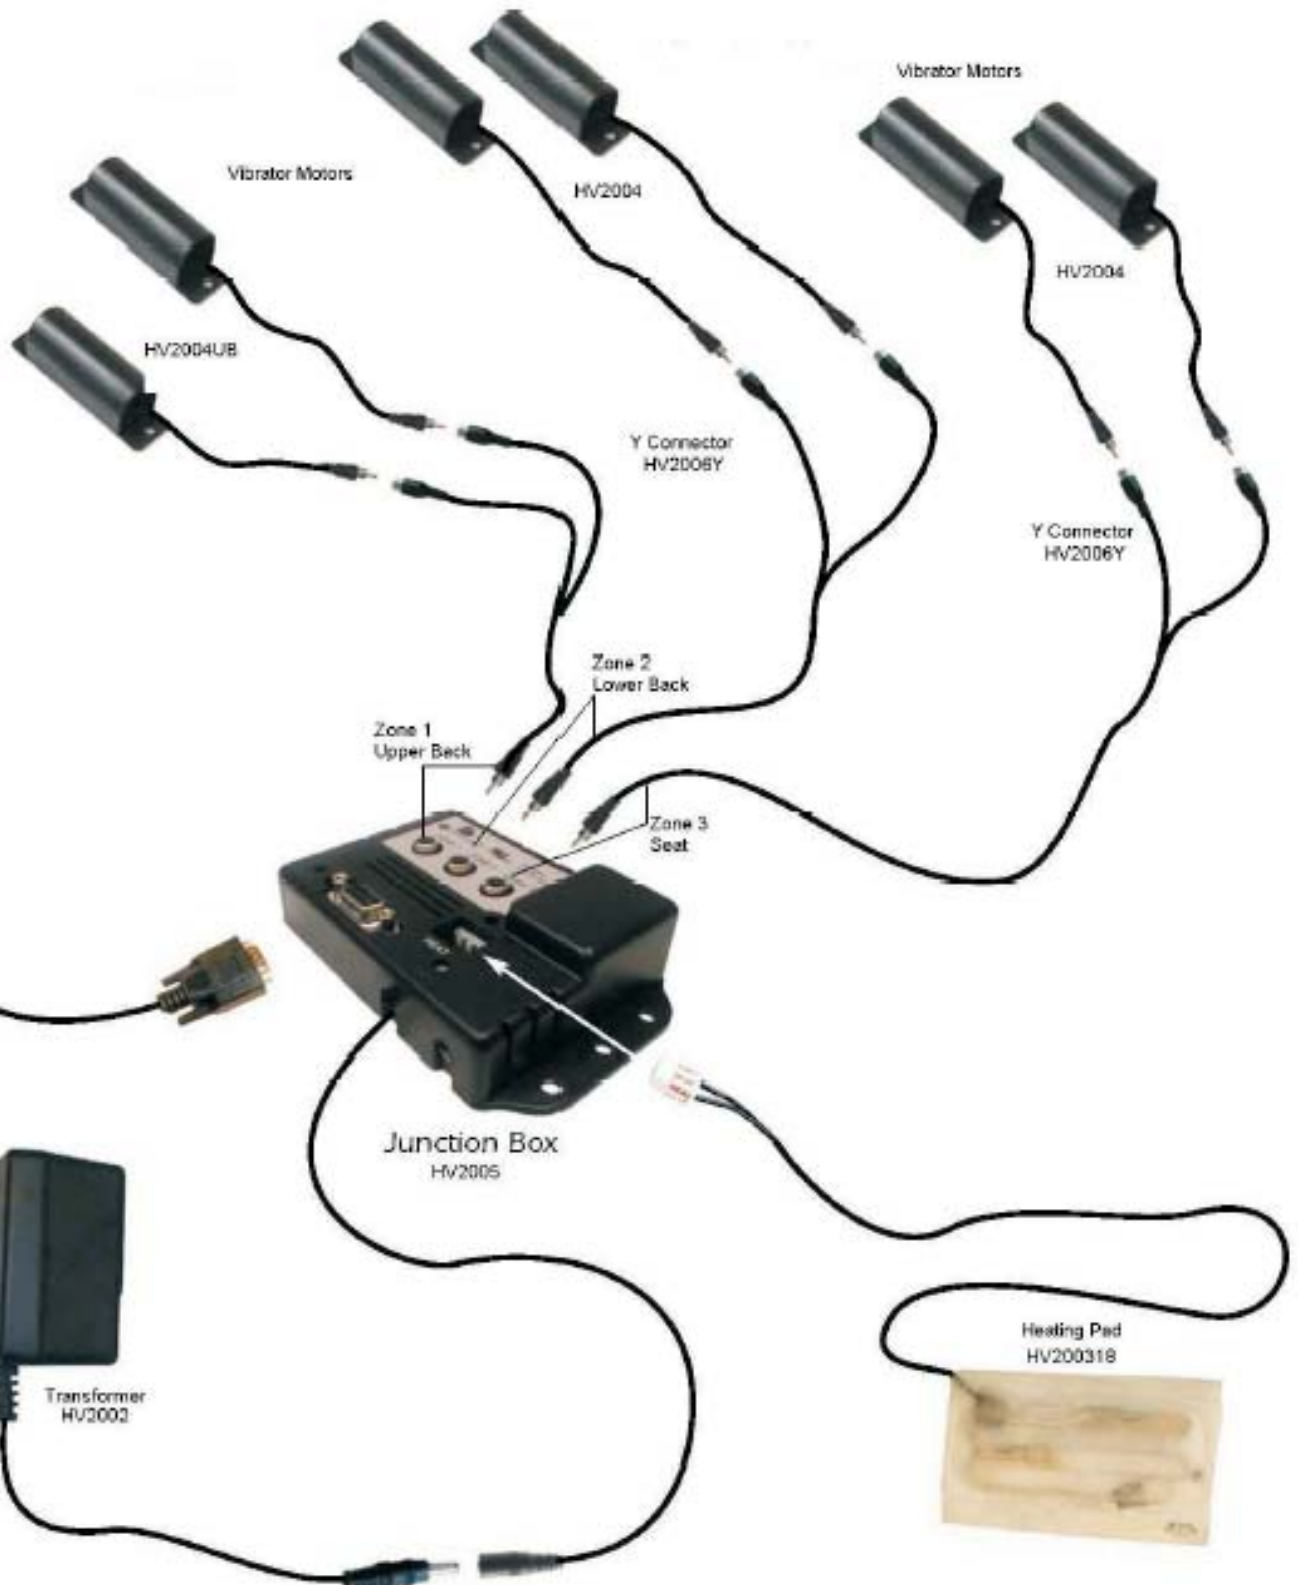

Junction box is located on the right inside arm lower back corner