


System Connection Diagram

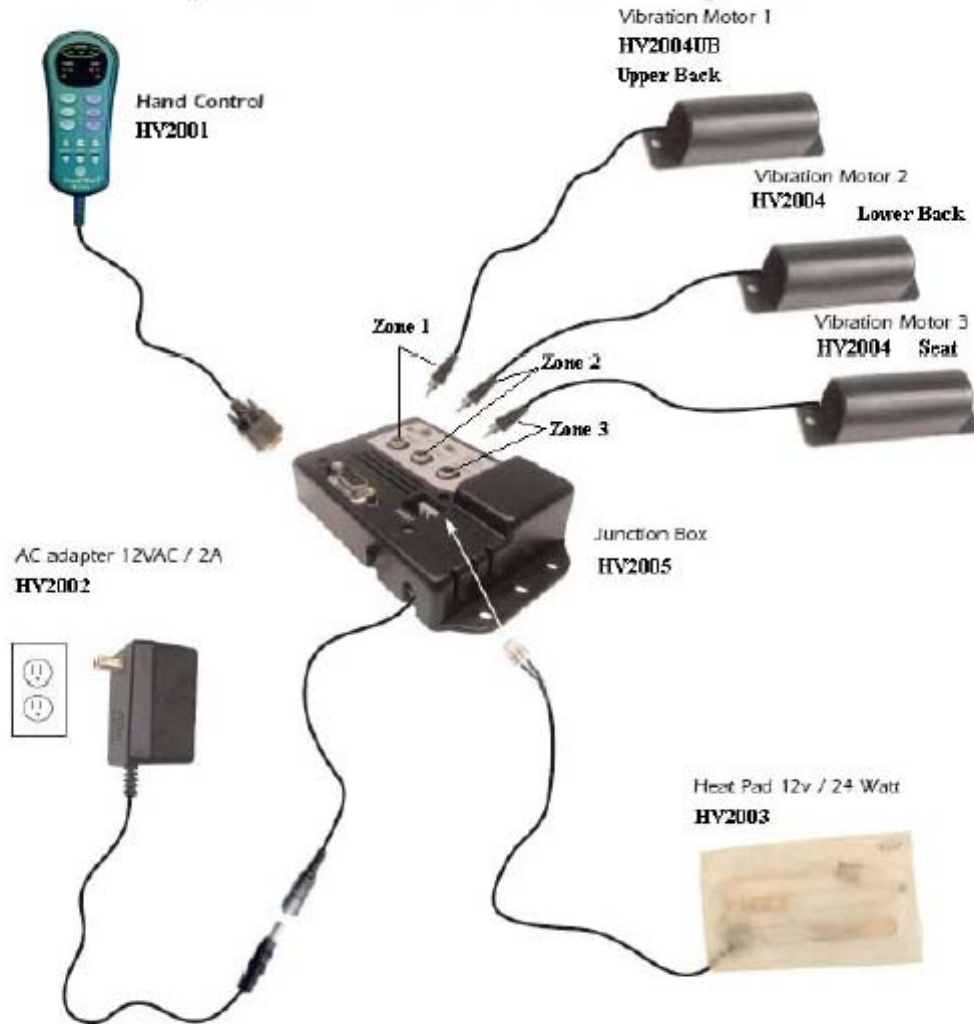

Junction box is located on the inside of the rear seat rail under the seat, to gain access to it, tip the chair over on its side and connect the wires as shown