

ALANTE PARTS	DESCRIPTION
SHARK	STARTING SERIAL #057921
PW-SHK-PM	SHARK POWER MODULE
PW-SHK-C	SHARK JOYSTICK (DL-REMA)
PW-SHK-JW	SHARK JUMPER CABLE
PW-SHK-CD01W	SHARK JUMPER CABLE 1.5M
PW-SHK-CD01	SHARK JOYSTICK (DK-REMD01)
PW-MAL-S	SHARK LEFT MOTOR
PW-MAR-S	SHARK RIGHT MOTOR
PW-BC-S	SHARK BATTERY CABLE
PW-BATCBLSHRK	SHARK BATTERY CABLES JUMPER
PW-RDA-S	SHARK RIGHT RETRACTABLE ARM
PW-RDAL-S	SHARK LEFT RETRACTABLE ARM
PW-DSA	SHARK PROGRAMMER ADAPETOR
DL50	
PW-DL50	DYNAMIC CONTROLLER (REAR)
PW-DL50F	DYNAMIC CONTROLLER (FRONT)
PW-DL50-R	DYNAMIC CONTROLLER (REAR REFERBISH)
PW-DL50F-R	DYNAMIC CONTROLLER (FRONT REFERBISH)
PW-MWH	MAIN WIRE HARNESS
PW-MAL	DYNAMIC LEFT MOTOR
PW-MAR	DYNAMIC RIGHT MOTOR
PW-ATA	ANTI TIPPER ASSEMBLY (1 PAIR)
PW-ATW	ANTI TIPPER WHEEL
PW-FRA	ALANTE FRAME ASSEMBLY
PW-SPA	ALANTE SEAT POST ASSEMBLY
PW-SP	ALANTE SEAT POST
PW-SPED	ALANTE SEAT PEDASTAL
PW-SPS	ALANTE SEAT POST STABILIZER
PW-SWA	ALANTE SEAT SWIVEL ASSEMBLY
PW-SH	ALANTE SEAT SWIVEL HANDLE
PW-SHG	ALANTE SEAT SWIVEL HANDLE GRIP
PW-RAA	ALANTE RIGHT ARM ASSEMBLY
PW-LAA	ALANTE LEFT ARM ASSEMBLY
PW-APAR	ALANTE RIGHT ARM PAD ASSEMBLY
PW-APAL	ALANTE LEFT ARM ASSEMBLY
PW-AAK	ALANTE ARM ADJUSTMENT KNOB
PW-BCH	ALANTE BEAU CONNECTOR HOLDER
PW-APBL	ALANTE ARM PAD BRACKET LEFT
PW-APBR	ALANTE ARM PAD BRACKET RIGHT
PW-APL	ALANTE ARM PAD LEFT
PW-APR	ALANTE ARM PAD RIGHT
PW-FFA	FRONT FORK ASSEMBLY
PW-FF	FRONT FORK
PW-FFMA	FRONT FORK MOUNTING ARM
PW-FWA	FRONT WHEEL ASSEMBLY
PW-FTFF	FRONT TIRE FOAM FILLED
PW-RT	REAR TIRE
PW-RRT	REAR TIRE TUBE
PW-FFRT	FOAM FILLED REAR TIRE
PW-FPA	FOOT PLATE ASSEMBLY

PW-FPB	FOOT PLATE BRACKET
PW-FP	FOOT PLATE
PW-CHGM	ALANTE CHARGER
PW-PCP	ALANTE CHARGER CORD
PW-RDA	ALANTE RETRACTABLE ARM RIGHT
PW-RDAL	ALANTE RETRACTABLE ARM LEFT
PW-DXHHP	ALANTE PROGRAMMER
PW-DSA	SHARK PROGRAMMER ADAPTER
PWRW-SHAB	ALANTE REAR WHEEL SHROUD BLUE
PWRW-SHAR	ALANTE REAR WHEEL SHROUD RED
PWRW-SHAO	ALANTE REAR WHEEL SHROUD ONXY
PWRW-SHAS	ALANTE REAR WHEEL SHROUD SAHARA
PWFW-SHAR	ALANTE FRONT WHEEL SHROUD RED
PWFW-SHAB	ALANTE FRONT WHEEL SHROUD BLUE
PWFW-SHAO	ALANTE FRONT WHEEL SHROUD ONXY
PWFW-SHAS	ALANTE FRONT WHEEL SHROUD SAHARA
PW-SB	ALANTE SEAT BELT (58 INCHES)
ALANTE 202	
PW2-PG70	202 CONTROLLER
PW2-MWH	202 MAIN WIRE HARNESS
PW2-CHG	202 CHARGER
PW2-PRGM70	202 PROGRAMMER
PW2-MAL	202 LEFT MOTOR
PW2-MAR	202 RIGHT MOTOR
PW2-ACC	202 CHARGER CORD
PW2RW-SHAB	ALANTE2 REAR WHEEL SHROUD BLUE
PW2RW-SHAR	ALANTE2 REAR WHEEL SHROUD RED
PW2RW-SHAO	ALANTE2 REAR WHEEL SHROUD ONXY
PW2RW-SHAS	ALANTE2 REAR WHEEL SHROUD SAHARA
PW2FW-SHAR	ALANTE2 FRONT WHEEL SHROUD RED
PW2FW-SHAB	ALANTE2 FRONT WHEEL SHROUD BLUE
PW2FW-SHAO	ALANTE2 FRONT WHEEL SHROUD ONXY
PW2FW-SHAS	ALANTE2 FRONT WHEEL SHROUD SAHARA
PW2-FFA	ALANTE 2 FRONT FORK ASSEMBLY
PW2-SB	ALANTE 2 SEAT BELT (72 INCHES)
GP100	
PW-SHAB	ALANTE GP100 SHROUD BLUE
PW-SHAR	ALANTE GP100 SHROUD RED
PW-SHAS	ALANTE GP100 SHROUD SAHARA
ALL OTHER PARTS ARE	THE SAME AS THE GP201
	ACCESSORIES-ALANTE
ACC-MBT-TS	BRACKET TO ATTACH:
ACC-BSK-02	REAR BASKET
ACC-WHA-01	WALKER HOLDER
ACC-OTH-02	O2 TANK HOLDER
ACC-QCH-01	QUAD CANE HOLDER
	NO BRACKET ACCESSORIES
ACC-CHD-02	CANE HOLDER / 2-CLIPS SCREW ON TO BACK

ACC-CUP-01	CUP HOLDER
ACC-CRU-01	CRUTCH HOLDER
ACC-CHT	CANE HOLDER TUBE
ACC-FLG	FLAG
PW-ELR	ELEVATING LEG REST
PW-SS	STUMP SUPPORT W/ BRACKET
PW-SAFR	SWING AWAY FOOT REST
PW-PSL	POWER SEAT LIFT